

Think GAIA  
For Life and the Earth

SANYO

Massage Lounger

HEC-DR5700



Lie back in total relaxation with soothing vibration that refreshes completely.

Experience all the benefits of the “neutral posture” offered by SANYO’s latest Massage Lounger. Relax your whole body and float away as the Lounger stimulates stiff muscles with pleasant, rhythmical vibrations that remove fatigue and leave you refreshed.

- Best position welcomes you to perfect relaxation.
- New feeling drum roll massage
- New-shape stiffness sensor
- Air massage for lower body and undulating sole *shiatsu*
- Heater keeps soles warm and comfortable.




HEC-DR5700


Promotes blood circulation through the synergistic effect of rhythm and stimulation

## The Drum Roll New

The drum roll massage leaves you with a feeling close to that of a shoulder massage you'd get at home. The rhythmical vibration from the drum-like rolls on the body is more clearly conveyed than in conventional tapping, promoting blood circulation.

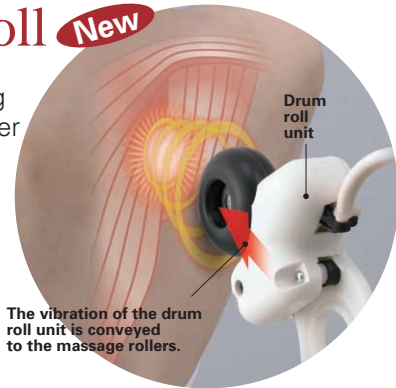

### Post-massage comfort comparison

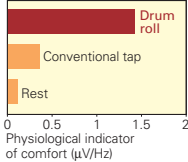

The drum roll massage is delivered in three-quarter time, a rhythm known to efficiently refresh the body. The synergistic combination of rhythm and stimulation delivers unprecedented levels of comfort.

#### Evaluation method:

Physiological indicator that represents comfort is measured after massage is applied to test samples who take the same posture for a certain period of time.

#### Evaluation by:

- Department of Kansei Design, Faculty of Psychological Science, Hiroshima International University
- ECO Technology Research Center, SANYO Electric Co., Ltd.

A real massage that's perfect for the stiffness you feel at any day or any time

## The Stiffness Sensor SANYO exclusive

SANYO's own stiffness sensor detects the amount of stiffness feeling by changes in the degree of physiological response. It automatically adjusts to provide the best massage for your body in the same way a professional senses your stiffness with his fingertips.

New shape! Fits the palms




#### Relaxed



#### With strong stiffness



The meter shows the degree of stiffness in real time.

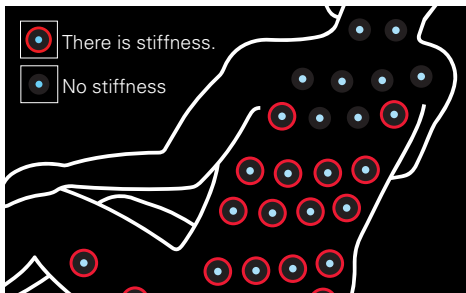

Stiffness is measured and shown on the monitor.

### Seat face twist

The airbags attached to the seat alternately inflate to firmly massage and loosen your thighs, buttocks, and lower back.

### Heat and a *shiatsu*-like undulation on the soles SANYO exclusive


A full foot massage that will completely relax and warm your feet.

### Leg point *shiatsu*

The knobby protrusions provide a comfortable stimulus for the soles and the calves.

### Operation panel

#### Remote Control Display

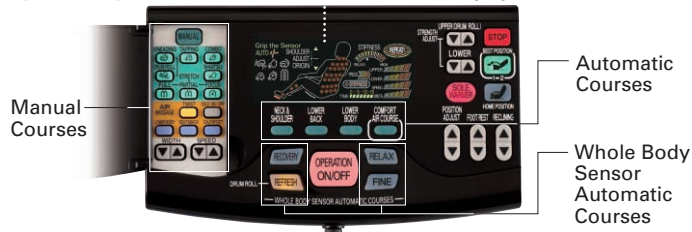

Combines a fit you've never known before with the feeling of a brisk massage

## The Best Position Comfort SANYO exclusive

We've incorporated the "neutral posture" for relaxation advocated by SANYO.

It provides the feeling of a perfect fit with your body—almost as if you are sinking into the chair. Experience the feeling of a brisk massage.



### Your lower back decides! The massage rollers improve the form-fitting feeling

We create the feeling of massage in a form-fitting chair. The position of the lower back determines the best posture for the body. The firm support of the massage rollers stabilizes the entire position of the body and prevents the rise of your lower back, shoulders, and feet.



### Specifications

Model No.	HEC-DR5700
Power consumption	230W
Power dissipation of electric heating equipment	33W
Rated time	30 minutes
Timer	Whole Body Sensor Automatic Courses ..... Approx. 15 minutes (Maximum of approx. 20 minutes depending on degree of stiffness detected)
	Automatic Courses ..... *FINE Course is Approx. 8 minutes
	Manual Courses ..... Approx. 15 minutes
Dimensions	730mm(W) x 1,240mm(D) x 1,220mm(H) *When upright (with foot rest retracted)
	730mm(W) x 1,940mm(D) x 760mm(H) *When reclined (with foot rest set horizontally)
Weight	Approx. 80kg
Cord length	Approx. 2,100mm
Accessories	Stand, Installation screws (Three)
Upholstery	Synthetic leather
Kneading frequency	(5 stages) Approx. 10–30 times/min.
Tapping frequency	(5 stages) Approx. 300–600 times/min.
Drum roll frequency	Approx. 42–98 times/min.
Shiatsu frequency	(5 stages) Approx. 7–15 times/min.
Tapping width	(5 stages) Approx. 60–130mm
Vertical movement speed	One up/down pass in approx. 35 sec.
Spine stretching width	(5 stages) Approx. 60–130mm
Range of partial stretching	Partial stretching (Partial): Repetition within approx. 200mm Partial stretching (Focus): Repetition within approx. 100mm
Massager rollers up/down range	Approx. 710mm
Height adjustment of massaging rollers	No gradation or 1cm/one press of button
Reclining angle	Approx. 120–170°
Reclining method	Back rest: Motor-driven type (Linked with foot rest) Foot rest: Motor-driven type (foot rest only)
Lower body massaging (Air pressure)	(3 stages) Approx. 19–38kPa *There is a slight difference according to the part.

- Specifications are subject to change without notice.
  - The Massage Lounger must not be used on anything other than the designated voltage.
- NOTICES**
- Please read the Instruction Manual thoroughly before use.
  - For those undergoing medical treatment, please consult your doctor before using this Massage Lounger.

\*1 Simultaneous reclining for the back, seat and legs at each preset angle (for massage loungers, as of July 2008, SANYO survey)

\*2 Built-in sole heating function (for massage loungers, as of July 2008, SANYO survey), Shiatsu undulation on the sole while moving the foot left and right (for massage loungers, as of July 2008, SANYO survey)

Distributed by:



SANYO Electric Co., Ltd.